







REMOVAL OF THE PUMP, AND BELT COVER ALLOW ACCESS TO REMOVE THE BEARING HOUSING FOR REPAIRS OR REPLACEMENT



REMOVAL OF THE BEARING HOUSING IS NECCESSARY TO REPLACE THE MECHANICAL SEAL AND CAN BE DONE WITHOUT DISMOUNTING THE MIXER FROM THE TANK, OR DRAINING THE TANK

DRAWN SEA PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FUSION FLUID EQUIPMENT LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF FUSION FLUID EQUIPMENT LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED.

WHILE FUSION FUSION FUILD EQUIPMENT LLC
SIRVES TO MANIAN THE INTEGRITY OF A
DISCONAS APPROVED, FUSION FUSION
DIMENSIONS ARE IN INCHES.
DIMENSIONS ARE IN INCHES.
MODIFICATIONS DURING THE MANUFACTURING
PROCESS TO IMPROVE THE, FORM, AND
DO NOT SCALE DRAWING



FUSION SIDE ENTRY BELT DRIVE W/ SWIVEL

DWG. NO. REV SALES-CSV-#S-## SCALE: 1:12 WEIGHT: SHEET 3 OF 3