


# ELECTRIC MOTOR INSTRUCTIONS

- CONFIRM MIXER SHAFT ROTATION DIRECTION MATCHES THE ROTATION ARROW ON YOUR MIXER.




- FOR 3 PHASE MOTORS, FOLLOW THE MANUFACTURER'S INSTRUCTIONS FOR INSTALLATION. EXAMPLE OF A 3 PHASE WIRING DIAGRAM ON A MOTOR: →

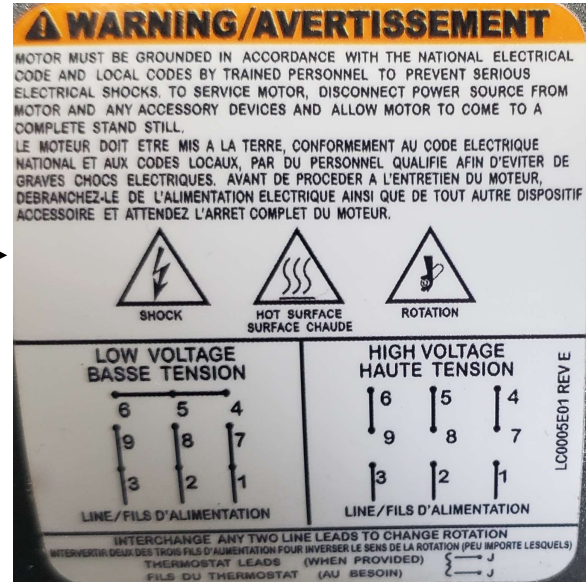

- ALL WIRING SHOULD BE PERFORMED BY QUALIFIED ELECTRICIANS AND MEET ALL APPLICABLE NATIONAL OR LOCAL CODES.

- 120V, SINGLE PHASE, 1 HP OR LESS MIXERS TYPICALLY COMES WIRED WITH A PLUG. EXAMPLE OF A SINGLE PHASE WIRING DIAGRAM ON A MOTOR: →

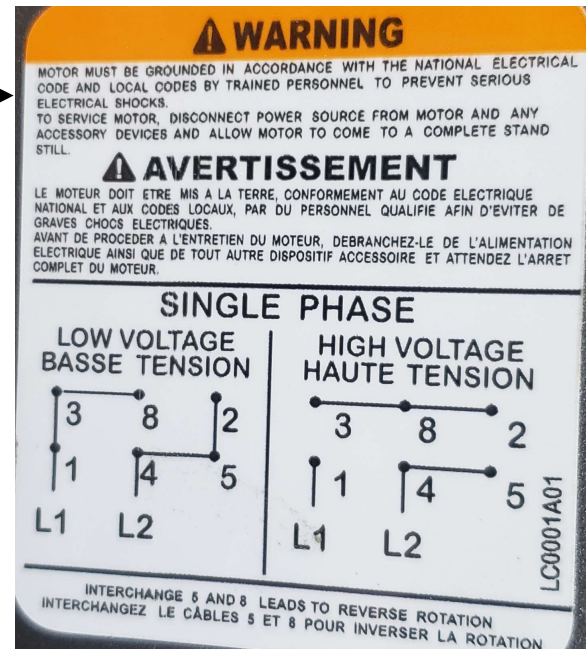

- ANY WIRING PROVIDED BY FUSION SHOULD BE INSPECTED BY YOUR ELECTRICAL INSPECTOR.

EXTENSION CORD USE IS DISCOURAGED



## CAUTION

DISCONNECT MIXER FROM POWER SOURCE BEFORE ASSEMBLING, LIFTING, MOVING, OR SERVICING MIXER.

CAUTION:

- THE VISCOSITY AND SPECIFIC GRAVITY OF THE FLUID AFFECTS MIXER SIZING AND SPECIFICATIONS
- DO NOT LAY MIXER ON THE SHAFT